


# Modular Universal Rubber Bump Stop Dimensions

Please contact us at [info@rubbershox.com](mailto:info@rubbershox.com) immediately if you have any questions about installing Modular Universal Rubber Bump Stop on your vehicle. We are a US company located in Southern California.

(Do not Copy) USB is Patent Pending. This instruction is part of an installation manual that is under Copyright Protection by RubberShox®  
**WARNING:** Customers require common automotive safety practices during the installations, we recommend installation be done by a professional mechanical knowledge. RubberShox® hold no liability for actual automotive safety practices.  
**DISCLAIMER:** RubberShox® Bump Stop products DO NOT increase vehicle load capacity. They are designed to equalize loads support OE suspension for more stability and increase ground clearance. Please refer to your vehicle's owner's manual for maximum load capacity for safe operation.

Model	UB1	UB2	UB3
Qty	Pair	Pair	Pair
Shore A Hardness	65	60	55
Material	Nature Rubber	Nature Rubber	Nature Rubber
Dimension	1.41"H x4" Diag.	1.85"H x4"Diag.	2.91"H x 4"Diag.
Interlock Depth	0.315"	0.315"	0.315"

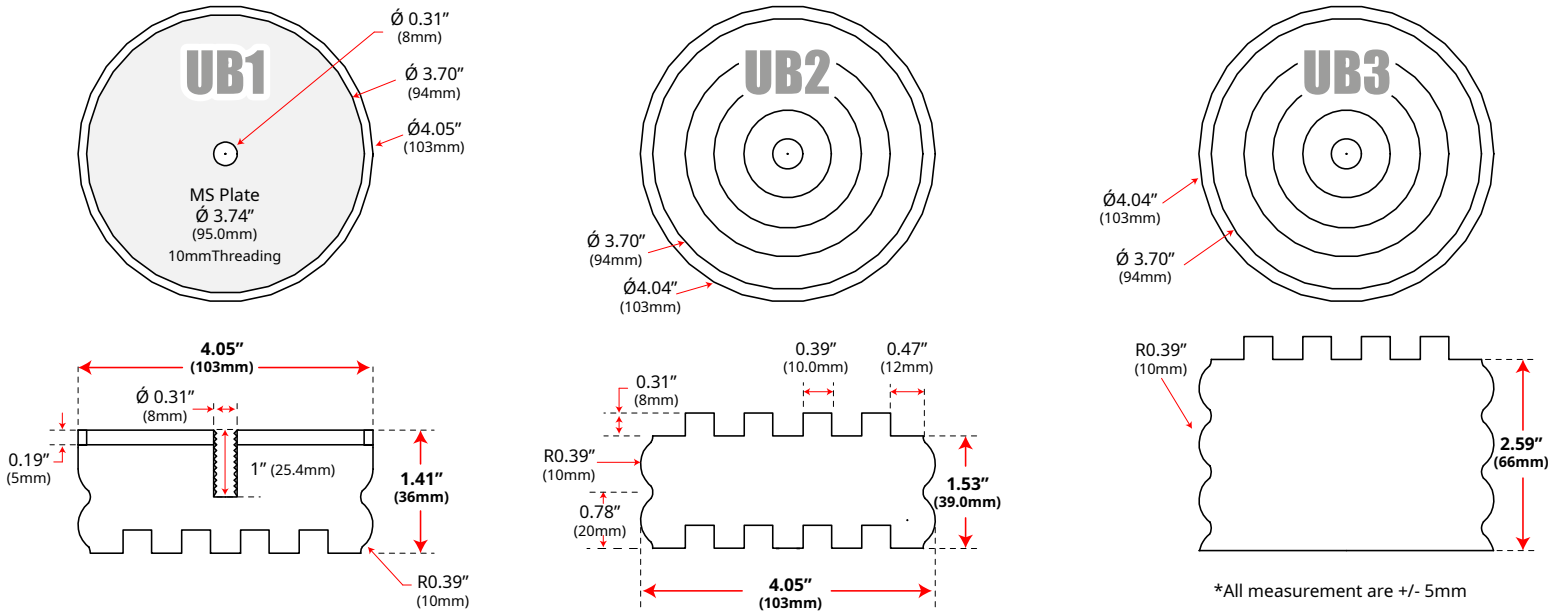

■ **Module Combination Height**

Module Combination	Total Height
UB1+UB3	4" (102mm)
UB1+UB2+UB2	4.47" (114mm)
UB1+UB2+UB3	5 -5/8" (143mm)
UB1+UB2+UB2+UB3	7-1/8" (181mm)