

if you order wrong size buffers to install on your vehicle, please contact us at info@rubbershox.com immediately. We will arrange replacement buffers for you.

■ **Installed Vehicle:**

2021 Toyota Tacoma TRD sports V6 4 wheels drive

■ **Tools needs:**

BreakerBar, Drive Socket Set, Torque Wrench, Allen Wrench, Jack Stand, Lift, Wheel Stop, Safety Goggle, WD-40

■ **Installed Item:** UB12-Z1 (Includes UB1, UB2, and Z1-UBS)



UB1




UB2



Z1-UBS

Installation Procedure:

1. Remove the factory original bump stop
 - a. Remove four nuts (3) and release two clamps (1) to take out the original bump stop (2).
 - b. Install UB1 on the Z1-UBS bracket using M10X30 or M10X45 socket screw

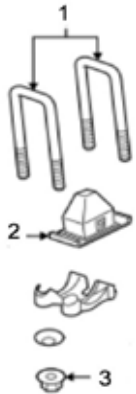

If not using locking nut you may use Thread lock (blue adhesive) before securing with normal bolt on vehicle.

2. Install RubberShox Natural Rubber Bump Stops Z1-UBS+UB1+UB2
 - a. Adding UB2



- b. Install UB12-Z1 on the vehicle



Note:

- We recommend take out UB2 for normal unload driving conditions. You can push the UB2 on to UB1 when you are having heavy loading or towing on the truck. If your truck is constant heavy loading or towing on the back, you could glue the UB1 and UB2 together with included rubber glue.
- If your vehicle rear is still not leveled, you may add an addition UB2 and/or UB3 to provide more support and level the vehicle chassis for more stable ride under heavy load/tow.

- Packages include M10X30, M10X45, and M10X60 set screw two regular nuts and one lock nuts
- insert screws into UB1 with Allen wrench or using two nuts to tight screws into UB1.

- c. Compare RubberShox UB1/Z1-UBS and original

